

## TORQUE ARM INSERT

2012-14 Fiat 500 Abarth

PART # NF.2201

### INSTALLATION INSTRUCTIONS

PART LIST: 1 - Torque Arm Insert

TOOLS REQUIRED: 1 - E18 External Torx Wrench  
or 14mm Box End Wrench

2 - 18mm Wrench

1. Park car on a flat, level surface capable of supporting the vehicle's weight on jack and jack stands. Using the manufacturer's recommended lifting point(s), raise front of vehicle and support with jack stands. **NEVER WORK ON A VEHICLE SUPPORTED ONLY WITH A JACK!**




2. Unbolt rear most torque arm bolt using E18 or 14mm wrench. To completely remove bolt pull down on exhaust pipe.  
**NOTE:** Some aftermarket exhaust front pipe may need to be unbolted from catalytic converter and dropped down to allow removal of bolt.



3. Only loosen front torque arm bolt using 18mm wrench on bolt head and holding 18mm wrench on nut.



4. Swing down torque arm.

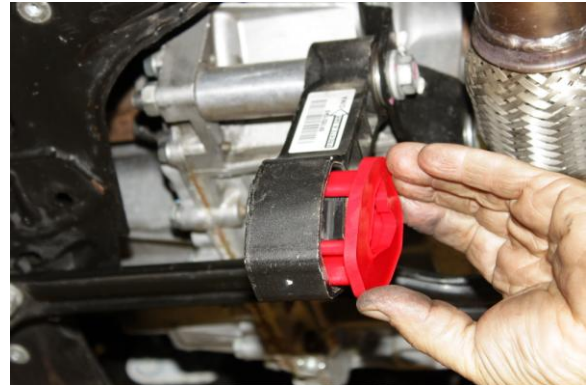

5. Install Urethane insert from passenger side of arm.



6. Push back up into place, install bolt and then tighten both bolts.

7. Reconnect exhaust if necessary.